

SJ Heavy Duty Bearing Retaining Plates

1. Remove the wheel.
2. Remove the brake drum and retain the 4 nuts and washers..
3. Remove the 4 nuts holding the backplate and bearing retainer to the end of the axle.
4. Remove the halfshaft using a slide hammer attached to one of the studs.
5. Remove the brake back plate.
6. Remove the bearing from the halfshaft
7. Slide the Heavy Duty Bearing Retaining Plate with the flat side of the plate facing the outbound end of the shaft and the machined slope of the centre hole facing the end of the shaft with the splines on.
8. Fit the new bearing to the halfshaft and slide the shaft back into the axle
9. Using the nuts and bolts provided bolt the Bearing Retaining Plate back in place
10. Replace the brake drum and wheel.

If you have any further questions please contact us via the website at www.muddyzook.com